


CITY SKYLINE MDS DIGITISER PANELS REF. 7460


GENERAL DESCRIPTION

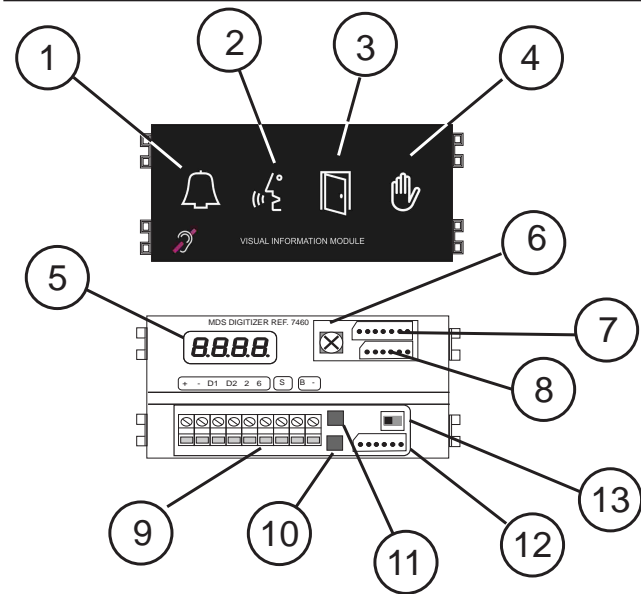

- 1. **Call indicator.** Lights up after a call is made.
- 2. **"In conversation" indicator.**
- 3. **"Open door" indicator.** Indicates that the door is opening.
- 4. **"System busy" indicator.** Indicates that another panel is in use.
- 5. **Programming display.** To help programming.
- 6. **Acoustic volume indicators regulator.**
- 7. **CN1 connector.** Amplifier connection
- 8. **CN2 connector.** Button and/or keyboard Module Connections.
- 9. **Installation connections block.** MDS Output
- 10. **S Button.** For programming
- 11. **P Button.** For programming
- 12. **MDS input from the previous panel.** If available.
- 13. **Audio switch.** In order to manually enable the audio with decoders.

Technical Specifications
- Power supply: 12V DC/ 150 mA (max)
- BUS: MDS FERMAX protocol on RS-485
- Operating temperature: -10° C - 40° C
- IP=43; IK=05


GENERIC INSTALLATION DIAGRAM

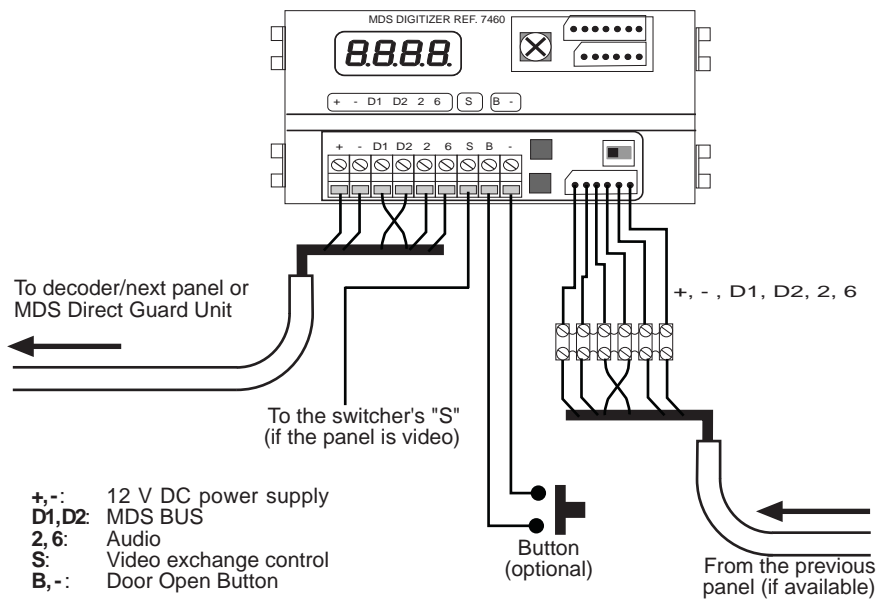


For more details, see corresponding installation diagram.

MODULE PRE-WIRING ACCORDING TO CONFIGURATION


ONLY BUTTONS

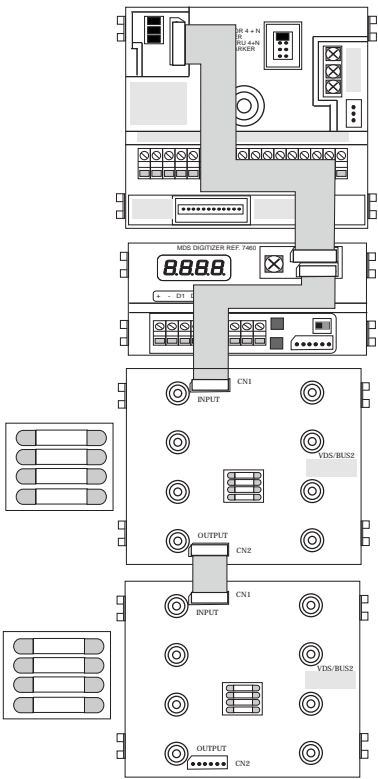


ONLY KEYPAD

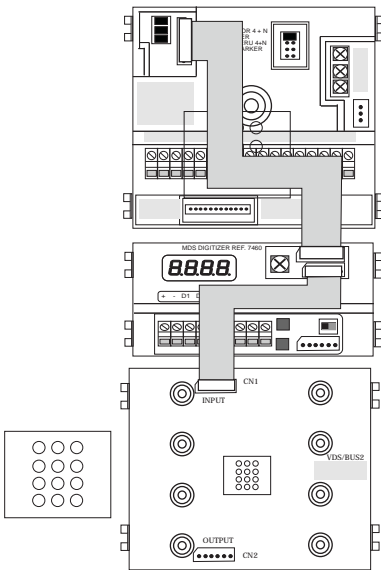


KEYPAD + BUTTONS

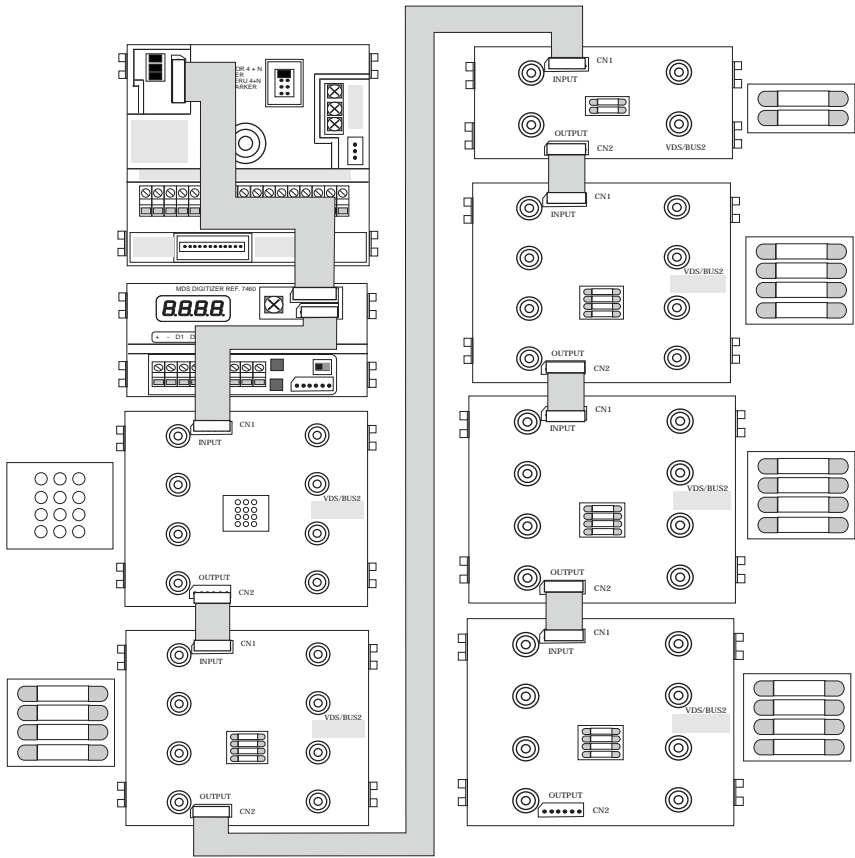

START-UP ROUTINE (upon powering)

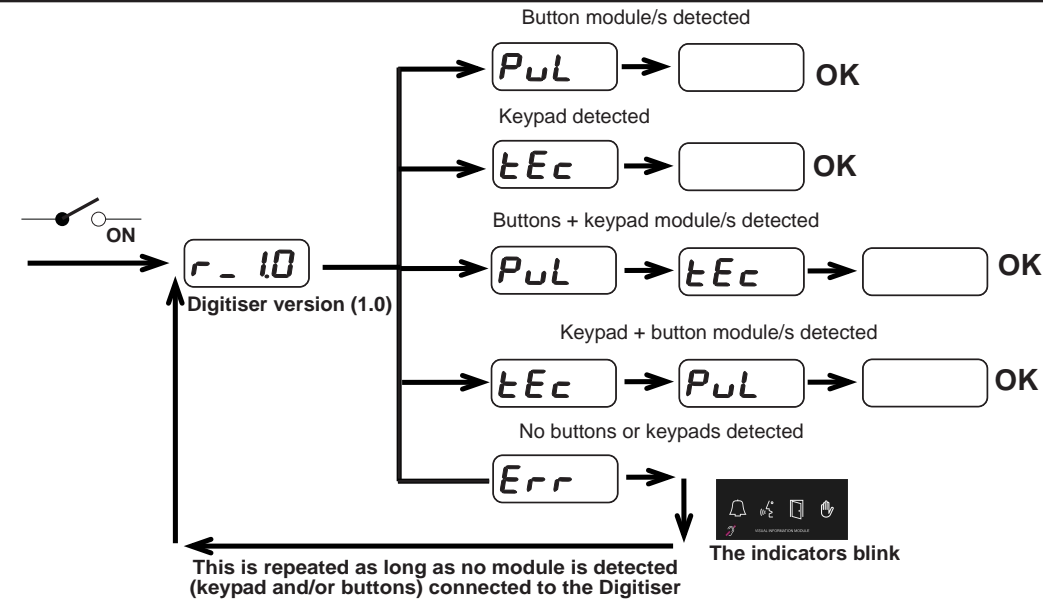


RESTORING FACTORY SETTINGS

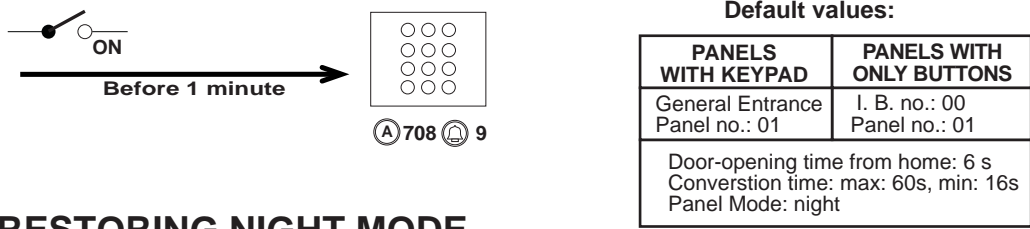

RESTORING NIGHT MODE


Apply if you want to change from day to night mode. This is useful, for example, if you want to enable this mode, and the Guard Unit is not available, or accessible.

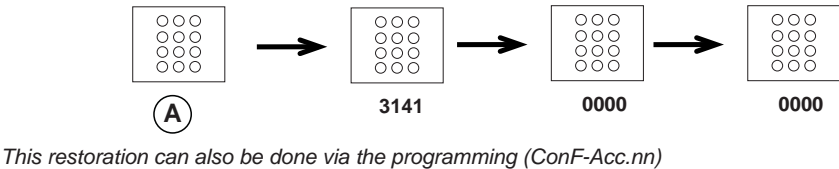


OPEN THE DOOR WITH A 4-digit PIN.Only keypad panels

This function is disabled as long as a code is not assigned in the digitiser's program.

Changing the code assigned in the program

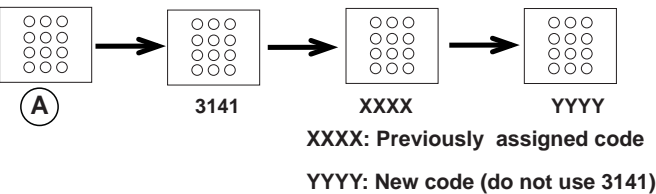

Delete and disable the introduction/change of pin code

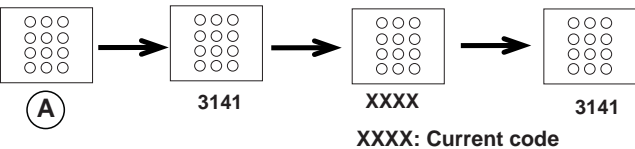

In order to enable and register a new code, you must access the Digitisers program.

Use the PIN to open the door

