

- Graphic screen
- "Left arrow" key
- "Bell" key
- "Right arrow" key
- CN1 connector for the amplifier
- CN2 connector for the proximity reader
- CN4 Keypad connector
- RS-485/12Vdc-100mA Connector

## START-UP PROCESS

- After powering the panel, the display presents the following information for 5 seconds:
- This goes on to standby mode, alternatively displaying the basic information for the user, according to the configuration: (direct calling, calls by search or guard unit call)
- After 30" without activity, the display will turn off, restarting upon noticing a person in front of them, or from touching any key (depending on the configuration)

## GENERAL CONCEPTS

**ALPHANUMERIC keypad:** If we configure this option, we can use the keypad to also enter letters (for example, to search for a user by his name). Upon pressing any keypad, a keyboard will also appear on-screen, which is used like a smartphone keypad. The username will appear, approximately, in the upper part of the keypad.

**MAPPED call:** When configured as such, it allows you to convert the residence number to a short alphanumeric code to make marking it easier. Ex. the user Alfredo Marqués, in home 120345, could be called with the code 12G. To use it with the numeric keypad, the ALPHANUMERIC keypad must be activated.

**RESTRICTED call:** With this option activated, you can only call residences in the agenda and that are also not marked as FILTERED. A message is displayed: "code not valid".

**Proximity card reader.** This panel has the possibility of connecting a proximity card reader with which the different users can be identified. Depending on the configuration, it may be necessary to also enter a PIN code with the keypad.

**Keypad codes:** The users can also open the door by identifying themselves by pressing the "A" followed by a personal code. This code may be 4, 5 or 6 digits, depending on the system's configuration. If a guard unit has programmed a message for this user (and/or a general message), it appears on the screen, if not seen previously. In a block or sub-block entrance, only users whose home number belongs to said block or sub-block can access. If you try and enter 5 consecutive times with an invalid code, the keypad function remains blocked for 1 minute.

## MAKING CALLS

Depending on the system's configuration, the screen will automatically turn on upon being in front of it, or upon pressing any key. The following images appear, alternating with another graphic image or text that has also been configured:




The way to make the call will depend on if the call options have been configured.



**DIRECT or MAPPED call:** Press any numeric keypad (from 0 to 9) of the main keypad or any letter of the secondary keypad (if installed).




Without the ALPHANUMERIC keypad, you can only enter the direct home code. Enter this code and press the bell..

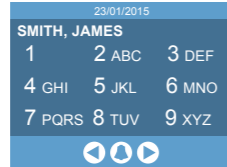


With an ALPHANUMERIC keypad activated, by pressing the "B" we access the marking keypad. If a MAPPED call, this keypad appears by pressing any key.

**Searching by name (agenda):**

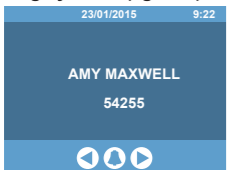

Press the arrow keypads (left or right) until you find the username you wish to call, and press the bell key.

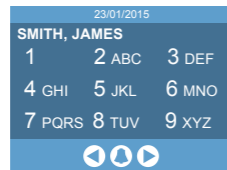

With an ALPHANUMERIC keypad activated, by pressing the "B" key we access the keypad. Enter the username and press the bell key.

## PROGRAMMING ACCESS

Press A and enter the access code: AB21AB

Access Code

Delete Cancel Keep Pressed

Enter the identification code: 19025 (by default)

Programming Code

Delete Exit Keep Pressed

If you enter an incorrect code it returns to standby

Invalid Code

**CONFIGURATION MENU**  
MAIN CONFIGURATION MENU  
Use the keypad to select the desired option

- |   |  |  |
|---|--|--|
| <b>1. USERS</b><br>1. ADD<br>2. ERASE<br>3. MODIFY<br>4. ADDITIONAL INFO<br>5. RESET<br>6. MEMORY<br>7. ORDER | <b>2. SETTINGS</b><br>1. CODES<br>2. ACCESS CONTROL<br>3. CALL<br>4. PANEL<br>5. CLOCK<br>6. VIDEO QUALITY | <b>3. DISPLAY</b><br>1. MESSAGE<br>2. BACKLIGHT<br>3. SETTINGS<br>4. LANGUAGE<br>5. RESET SETTINGS<br>6. UPGRADE |
|---|--|--|

The description of each function is indicated in the following pages. INSTALLER CODE allows you complete access to all available options (those represented in these instructions).

## TECHNICAL SPECIFICATIONS

- Directory capacity: 10,000 users.
- Total consumption: 118,5 mA (5V) + 7,70 mA (12V) = 126,2 mA ±15% (STANDBY)
- 311,5 mA (5V) + 7,70 mA (12V) = 319,2 mA ±15% (TFT ON)
- Operating Temperature: -20 °C, 70 °C
- Relative humidity: 5 % - 95 %
- Compatible from audio amplifier V 30.10 and video amplifier V 40.10 onwards.
- This display is compatible with Display Plus software version V 02.00.001 and higher.

## USER MENU

- USERS
- ADD
- ERASE
- MODIFY
- ADDITIONAL INFO
- RESET
- MEMORY
- ORDER

**USER MENU** allows you to configure the different users' data

Use the arrows to move between different configuration submenus of the user data. There may be repeated names, and several names in the same home. If you present a user card, within this menu, it is saved as a card for this user. By pressing B from any submenu, save data and return to USER MENU.

1. ADD

Cancel

Cancel A

Exit B

Cancel the entered data and return to USER menu

1. ADD

PIN

Delete A

Exit B

PIN of 4 digits, assigned to each user to combine with proximity card

1. ADD

Access code

Delete A

Exit B

6 digit code assigned to the user to open the door

1. ADD

Filtered

Cancel A

Exit B

Filtered: does not appear in the directory and can not be called. Restricted call has been activated

1. ADD

Name

JAMES -----

Delete A

Exit B

Use alphanumeric keypad (if activated) or secondary keypad to enter the name. This data is required

1. ADD

Unit

00 1266

Delete A

Exit B

Indicate the home number This data is required

1. ADD

Call code

156F

Delete A

Exit B

Mapped call code assigned to the user (4 digit max)

1. ADD

Invisible

Cancel A

Sairir B

Invisible: does not appear in the agenda but can be called

2. ERASE

JAMES SMITH

001266

Delete A

Exit B

Use the arrows until reaching the user you hope to delete and confirm with A. Press B, to exit without deleting

2. ERASE

Agenda is empty

Exit B

If there are no users in the list, the "Agenda is empty" message appears

3. MODIFY

0012665

Modify A

Exit B

To change the data of any user, use the arrows to move between the different fields and operate in the same way as to ADD users

4. ADDITIONAL INFO

JAMES SMITH

001266

Modify A

Exit B

Use the arrows to select the user and press A

4. ADDITIONAL INFO

1. TYPE

2. TEXT

3. IMAGE

If in the TYPE option the scenario "in the Agenda" is chosen, it is only possible to display TEXT.

1. TYPE

In the call

Exit B

Use the arrows to select the moment in which the information must appear

- Not used
- In the call
- In door opened
- In the agenda

5. RESET

USERS

Are you sure?

Confirm A

Exit B

Use the alphanumeric keypad (if activated) or the secondary keypad to enter the text message to appear after calling the home

6. MEMORY

156/9844

Exit B

Use the arrows to select the image to appear, after calling the corresponding home from the available images. These images must have been previously uploaded onto the equipment. See ADVANCED MANUAL

7. SORETED BY

Unit

Exit B

7. SORTED BY

Name


Exit B

Sort order type of users list

# CONFIGURATION MENU


**2. SETTINGS**  
 1. CODES  
 2. ACCESS CONTROL  
 3. CALL  
 4. PANEL  
 5. CLOCK  
 6. VIDEO QUALITY

The CONFIGURATION MENU lets you set the panel's parameters  
 Select, via the numeric keypad, the desired configuration

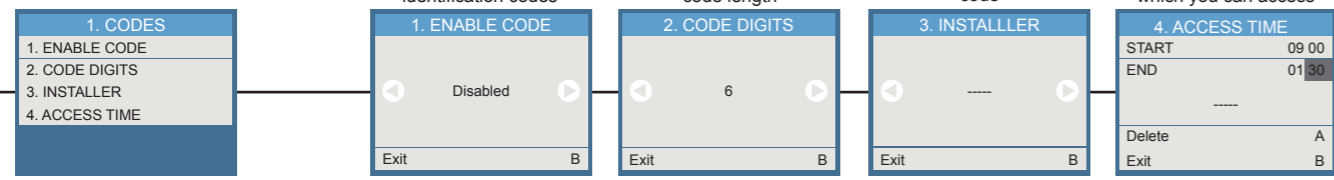


Enable or disable the keypad to use the different identification codes  
 Enter the identification code length  
 Enter the administrator code which you can access

This option allows you to configure the identification codes used by different users.  
 Use the numeric keypad to indicate the desired option, amongst the ones available.  
 Within each of the options, select with the arrows or enter data via the keypad, and confirm with B

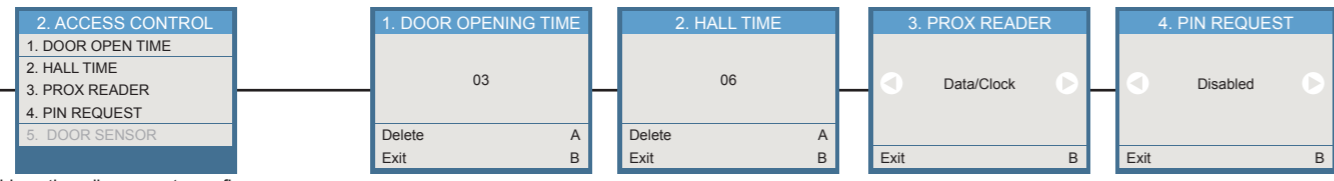


Lock-release activation time in seconds, when opened from the residence  
 Lock-release activation time in seconds, when opened from the entrance hall's button  
 Type of cards to be use: Wiegand or Data/Clock  
 Indicate whether a PIN code associated with the proximity card will be used (enabled) or not (disabled)

This option allows you to configure the entrance control parameters  
 Within each of the options, with the arrows select or enter data via the keypad, and confirm with B

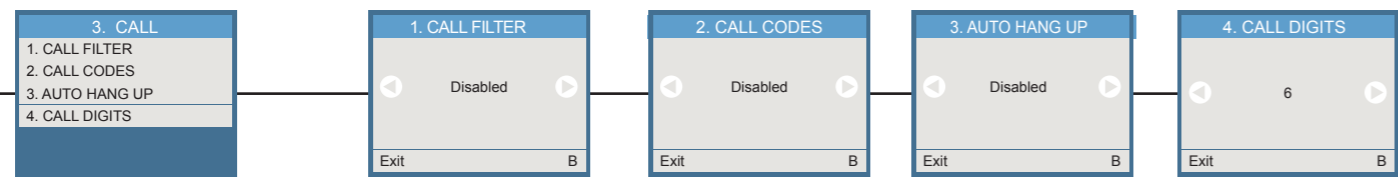


Enabled, you can only call homes from the directory, and if they are not filtered  
 Enabled you can use the alphanumeric call codes via the number keypad  
 Automatic hanging up  
 To select the number of call digits from the General Entrance 4 or 6. To select this option you must choose 4. PANEL / 3. PANEL TYPE: General Entrance

This option allows you to configure the way in which you can make calls to the homes  
 Within each of the options, with the arrows select or enter data via the keypad, and confirm with B

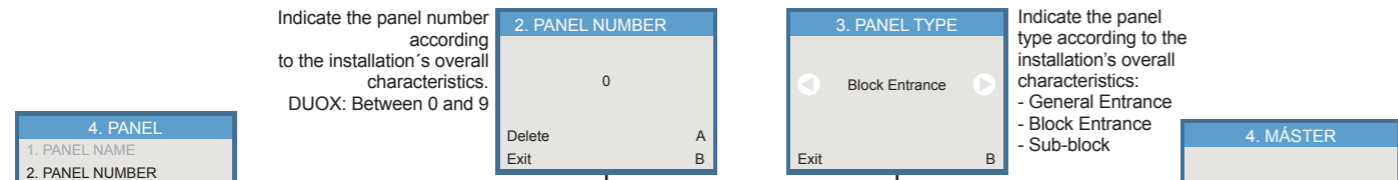

Indicate the panel number according to the installation's overall characteristics. DUOX: Between 0 and 9  
 Indicate the panel type according to the installation's overall characteristics:  
 - General Entrance  
 - Block Entrance  
 - Sub-block  
 Configure the panel as MASTER to allow for the programming of terminals. If there is another MASTER panel, it would remain deactivated

This option allows you to configure the way in which you can make calls to the homes.  
 Within each of the options, with the arrows select or enter data via the keypad, and confirm with B.  
 (\*) NOTE: These options are displayed or not, depending on the type of panel chosen.

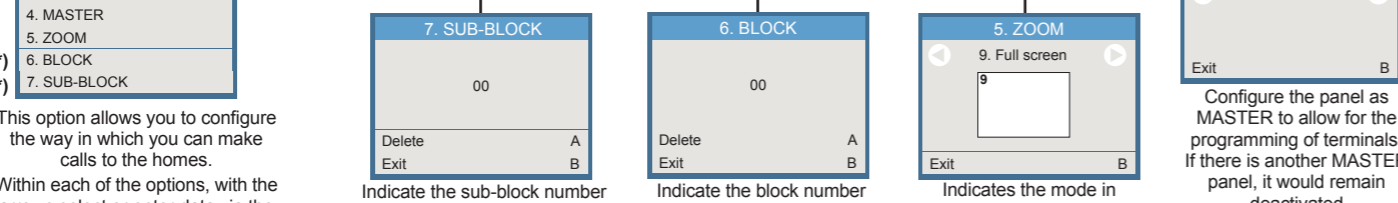


Select the date presentation format:  
 - DD/MM/YYYY  
 - MM/DD/YYYY  
 - YYYY/MM/DD  
 - YYYY/DD/MM

Enabled: Display time and date  
 Time and date format options  
 Select if you want a 12h or 24 h format  
 Enter the current date. Select the date with the arrows.  
 A: Delete marked data  
 B: Confirm

This option allows you to configure the way in which you can make calls to the homes.  
 Within each of the options, with the arrows select or enter data via the keypad, and confirm with B.

# DISPLAY MENU

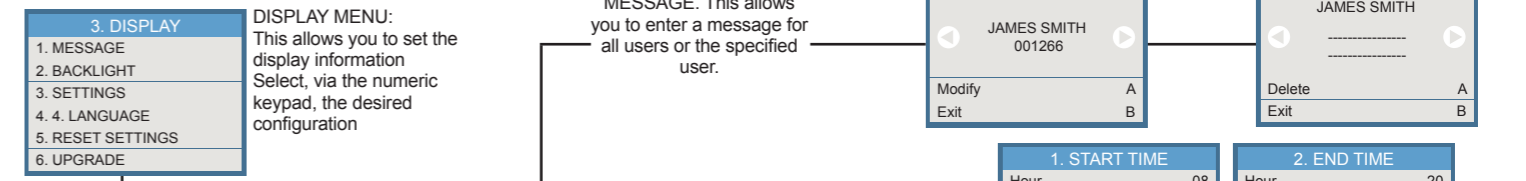

MESSAGE. This allows you to enter a message for all users or the specified user.  
 Select a user (or all, with the "All users" option)  
 Write the message (up to 2 lines with 16 characters)

Enabled: The numeric keypad acts as alphanumeric  
 Loop time in the standby screen  
 The screen will turn on:  
 - Key pressed  
 - Key or sensor

Screen brightness settings as a percentage  
 Screen settings  
 Select 1 or 4 names to display on the screen  
 Indicate the building's name or similar  
 Select the image to display when in standby. This image must be previously loaded  
 Enabled: Active the sound of the keypad

3. DISPLAY MENU:  
 This allows you to set the display information  
 Select, via the numeric keypad, the desired configuration

1. MESSAGE  
 2. BACKLIGHT  
 3. SETTINGS  
 4. LANGUAGE  
 5. RESET SETTINGS  
 6. UPGRADE

1. MESSAGE: JAMES SMITH, 001266  
 Modify: A, Exit: B

1. START TIME: Hour 08, Minutes 00  
 Delete: A, Exit: B

2. END TIME: Hour 20, Minutes 15  
 Delete: A, Exit: B

2. BACKLIGHT: 100%  
 Exit: B

1. ALPHA KEYPAD: Disabled  
 Exit: B

2. SCREEN TIME: 00  
 Delete: A, Exit: B

3. SCREEN ACTIVATION: Key or sensor  
 Exit: B

4. AGENDA: 4 names per screen  
 Exit: B

5. BUILDING NAME: SKYLINE TOWER  
 Delete: A, Exit: B

6. SHOW PICTURES: Picture 2  
 Picture 3, 4, 5  
 Confirm: A, Exit: B

7. KEYPAD SOUND: Disabled  
 Exit: B

4. LANGUAGE: English  
 Exit: B

5. RESET SETTINGS: Are you sure?  
 Confirm: A, Exit: B

6. UPGRADE: 1. PICTURES, 2. TEXTS, 3. FIRMWARE  
 Use the keypad to select the desired update. Updates via the RS-485 port (See advanced Manual for more details)

1. PICTURES: Are you sure?  
 Confirm: A, Exit: B

2. TEXTS: Are you sure?  
 Confirm: A, Exit: B

3. FIRMWARE: Are you sure?  
 Confirm: A, Exit: B